## **Care Guide**

## for your new garden furniture set

Thank you for purchasing a garden furniture set from Mattressman. Garden furniture can last many years when looked after, so to maintain or even increase your garden furniture's longevity, we've listed some of our top tips below on how to look after them well.



A Stanley knife may damage your new garden furniture set, so ensure you unpackage your new set with care. Such damage is not covered by any guarantee/warranty.



Use a cover when your set is not in use to avoid damage to tempered glass or polywood surfaces under extreme weather conditions.



Use a parasol in hot weather to avoid damage to table surfaces.

 


Do not place glasses on outside tables without coasters. This is to avoid a magnifying effect from glasses, which increases the chances of tempered glass shattering or polywood melting.





For rattan furniture, simply use warm soapy water and a sponge to clean. Avoid using heavy detergents or jet washers.





Do not use heavy detergents on wooden sets, instead there are many specific cleaning products for various kinds of woods, so be sure to find the relevant one for your set.



There are many waterproof aspects of garden furniture, however you should cover or bring inside parasols, fabric cushions and textilene slatted pergolas to avoid breakages or damage not covered by a warranty/guarantee.

Keeping your garden furniture covered, whether it's rattan, fabric or wooden, is paramount to ensuring it's protected in extreme weather and to maintain its longevity. We recommend that you air this out regularly in order to avoid the build-up of condensation, which can increase the chances of mould or mildew developing on your set.





Never leave your parasol up when not in use, no matter the weather. This can cause parts to snap and become unusable. We also recommend covering or tying down parasols to prevent damage caused by strong winds, which isn't covered by warranty or guarantee.

Please be careful when removing the cover of your garden furniture. Whilst durable, garden furniture covers can rip when removed with excessive force over corners of tables or chairs.

